



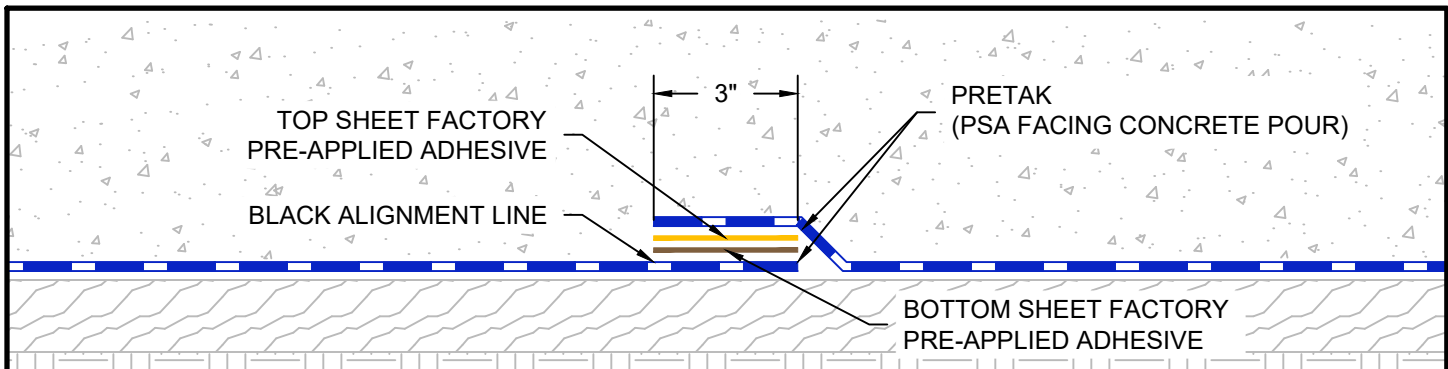

Ⓐ LONG SHEET EDGES: DUAL FACTORY-APPLIED HYDROLAP ADHESIVE SEAM (VERTICAL SHEET ORIENTATION – PLAN VIEW)

- 1) LINE UP TOP LAYER OF PRETAK TO BOTTOM SHEET FACTORY SEAM LINE
- 2) REMOVE RELEASE LINERS COVERING ADHESIVE EDGES ON BOTTOM AND TOP SHEET
- 3) ROLL HEAVY ROLLER OVER TOP SHEET SEAM WHILE APPLYING SIGNIFICANT PRESSURE
- 4) VERIFY SEAM IS COMPLETELY BONDED
- 5) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRETAPE AND PM SEALANT

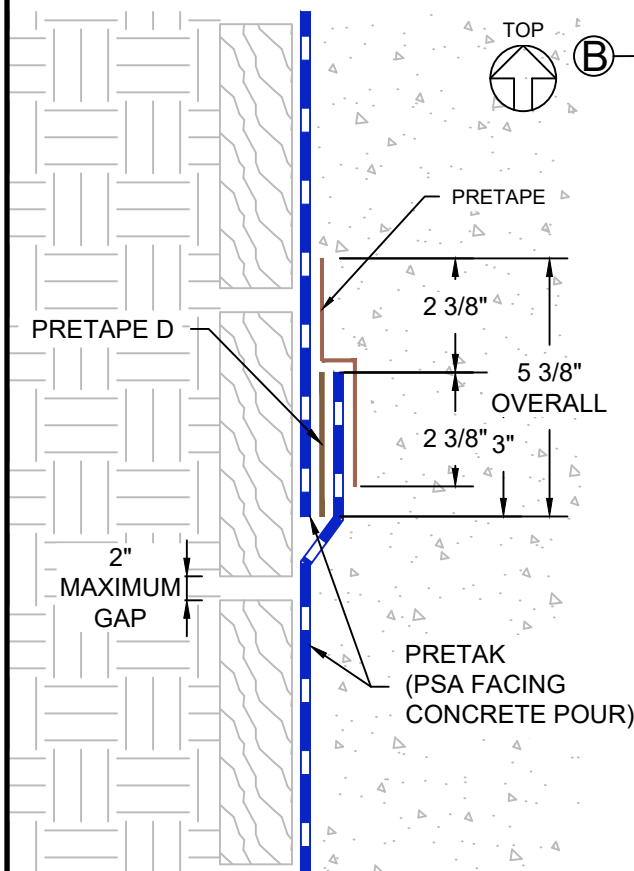

Ⓑ SHORT END OF ROLL LAP AND CUT SHEET EDGES: REINFORCED TAPED SEAM (VERTICAL SHEET ORIENTATION – SECTION VIEW)

APPLICATION NOTES:

- 1) APPLY PRETAPE D DOUBLE-SIDED TAPE TO SEAM EDGE
- 2) REMOVE RELEASE LINER COVERING TOP OF PRETAPE D DOUBLE-SIDE TAPE
- 3) SEAM PRETAK TOGETHER OVER THE PRETAPE D DOUBLE-SIDED TAPE
- 4) APPLY PRETAPE SINGLE-SIDED TAPE CENTERED OVER SEAM EDGE
- 5) ROLL HEAVY ROLLER OVER TOP SHEET SEAM WHILE APPLYING SIGNIFICANT PRESSURE
- 6) USE V-ROLLER AT EDGE OF SEAM OVER PRETAPE SINGLE-SIDED TAPE
- 7) VERIFY SEAM IS COMPLETELY BONDED
- 8) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRETAPE AND PM SEALANT

REFERENCE DRAWING 51.116.1.1 FOR WALL HEIGHT UP TO 10' OR DRAWING 51.116.1.2 FOR WALLS HIGHER THAN 10' FOR SHEET STAGGERING ORIENTATION AND DRAWING 51.116.3 FOR END LAP WITH T-LAP SEAM DETAIL FOR SHEET AND TAPE SEQUENCING.

NOTE: CONTACT EPRO FOR SEAM GUIDANCE ON HORIZONTALLY ORIENTED PRETAK APPLICATIONS ON VERTICAL SUBSTRATES.

SHORING WALL SEAMS

	SYSTEM NAME	DRAWING NUMBER	
	PRETAK	51.310.7.1	
	DRAFTER	DATE	
	RJT	07/17/2026	

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1