




STEP 1:  
CUT A SQUARE PATCH OF  
PRETAK 8" WIDER THAN THE  
WIDTH OF THE PENETRATION

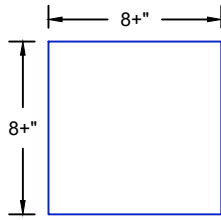


STEP 2:  
FIND THE CENTER OF THE  
SQUARE BY FOLDING IT  
INTO QUARTERS

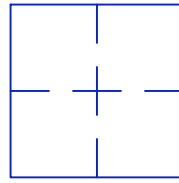

STEP 3:  
STAR-CUT CENTER OF  
SQUARE TO THE WIDTH  
OF THE PENETRATION  
(TRIM FLANGES TO 2" MAX.  
LENGTH)

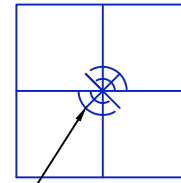

CUT & TRIM

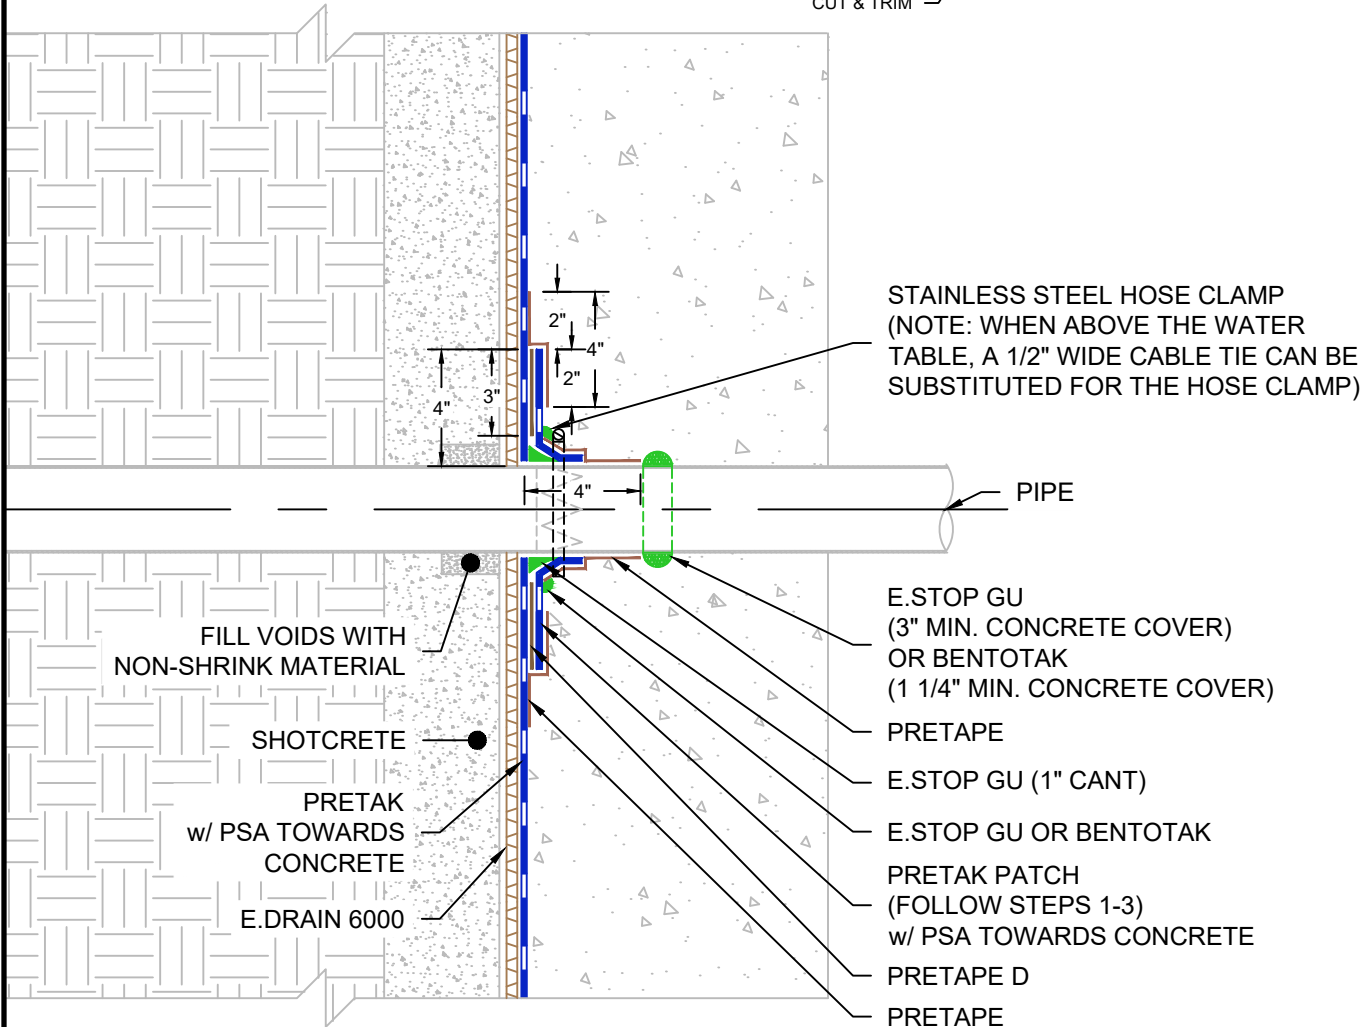

NOTES:

- 1) TIGHTEN HOSE CLAMP AS TIGHT AS POSSIBLE WITHOUT DAMAGING THE MEMBRANE.
- 2) SPACE PENETRATIONS A MINIMUM OF 6" FROM SLAB EDGE, CORNERS, WALLS, OR OTHER PENETRATIONS.

BLINDSIDE VERTICAL PENETRATION - SOE SHOTCRETE



SYSTEM NAME

PRETAK

DRAFTER

RJT

DRAWING NUMBER

51.320.2

DATE

10/19/2023

**PRETAK**

AS A SUPPLIER OF FINISHED RPRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1