




STEP 1:
CUT A SQUARE PATCH OF
PRETAK 8" WIDER THAN THE
WIDTH OF THE PENETRATION

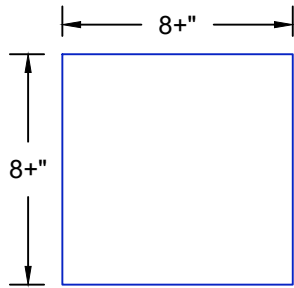


STEP 2:
FIND THE CENTER OF THE
SQUARE BY FOLDING IT
INTO QUARTERS

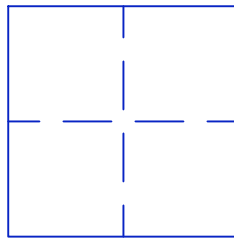

STEP 3:
STAR-CUT CENTER OF
SQUARE TO THE WIDTH
OF THE PENETRATION
(TRIM FLANGES TO 2" MAX.
LENGTH)

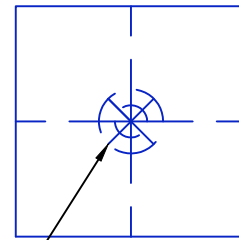

CUT & TRIM

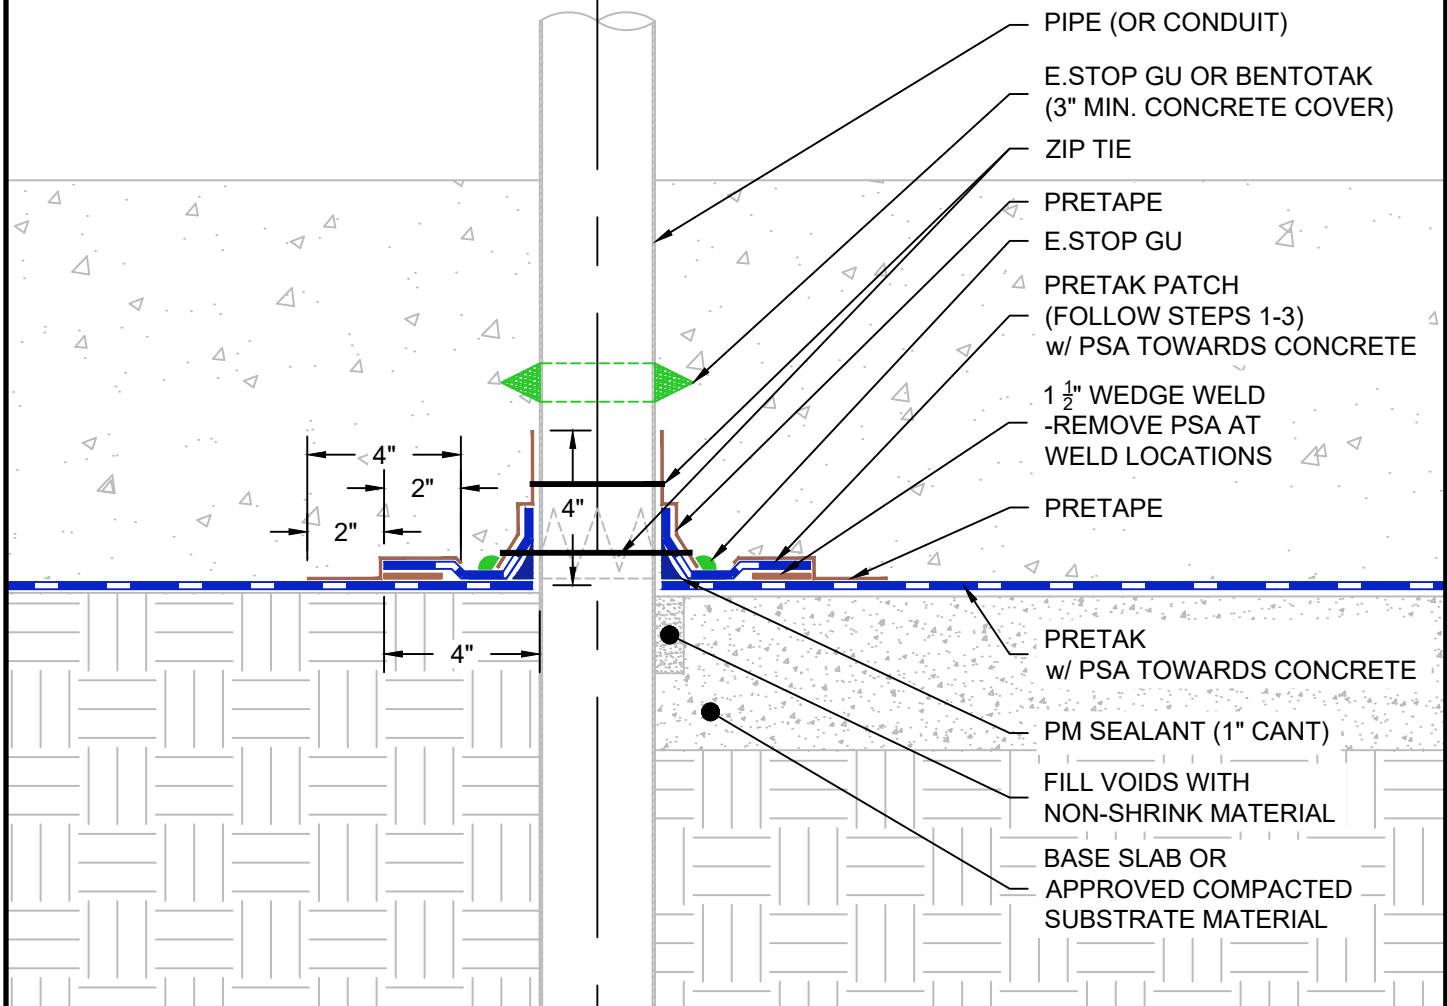

UNDERSLAB PENETRATION - PIPE - NON HYDROSTATIC

	SYSTEM NAME	DRAWING NUMBER	PRETAK HW
	PRETAK HW	52.120.1.1	
	DRAFTER	DATE	
	RJT	1/13/2026	

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1