




STEP 1:
CUT A SQUARE PATCH OF
PRETAK 8" WIDER THAN THE
WIDTH OF THE PENETRATION

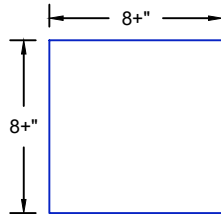


STEP 2:
FIND THE CENTER OF THE
SQUARE BY FOLDING IT
INTO QUARTERS

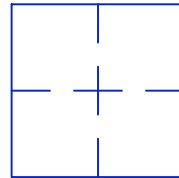

STEP 3:
STAR-CUT CENTER OF
SQUARE TO THE WIDTH
OF THE PENETRATION
(TRIM FLANGES TO 2" MAX.
LENGTH)

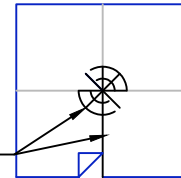

CUT & TRIM

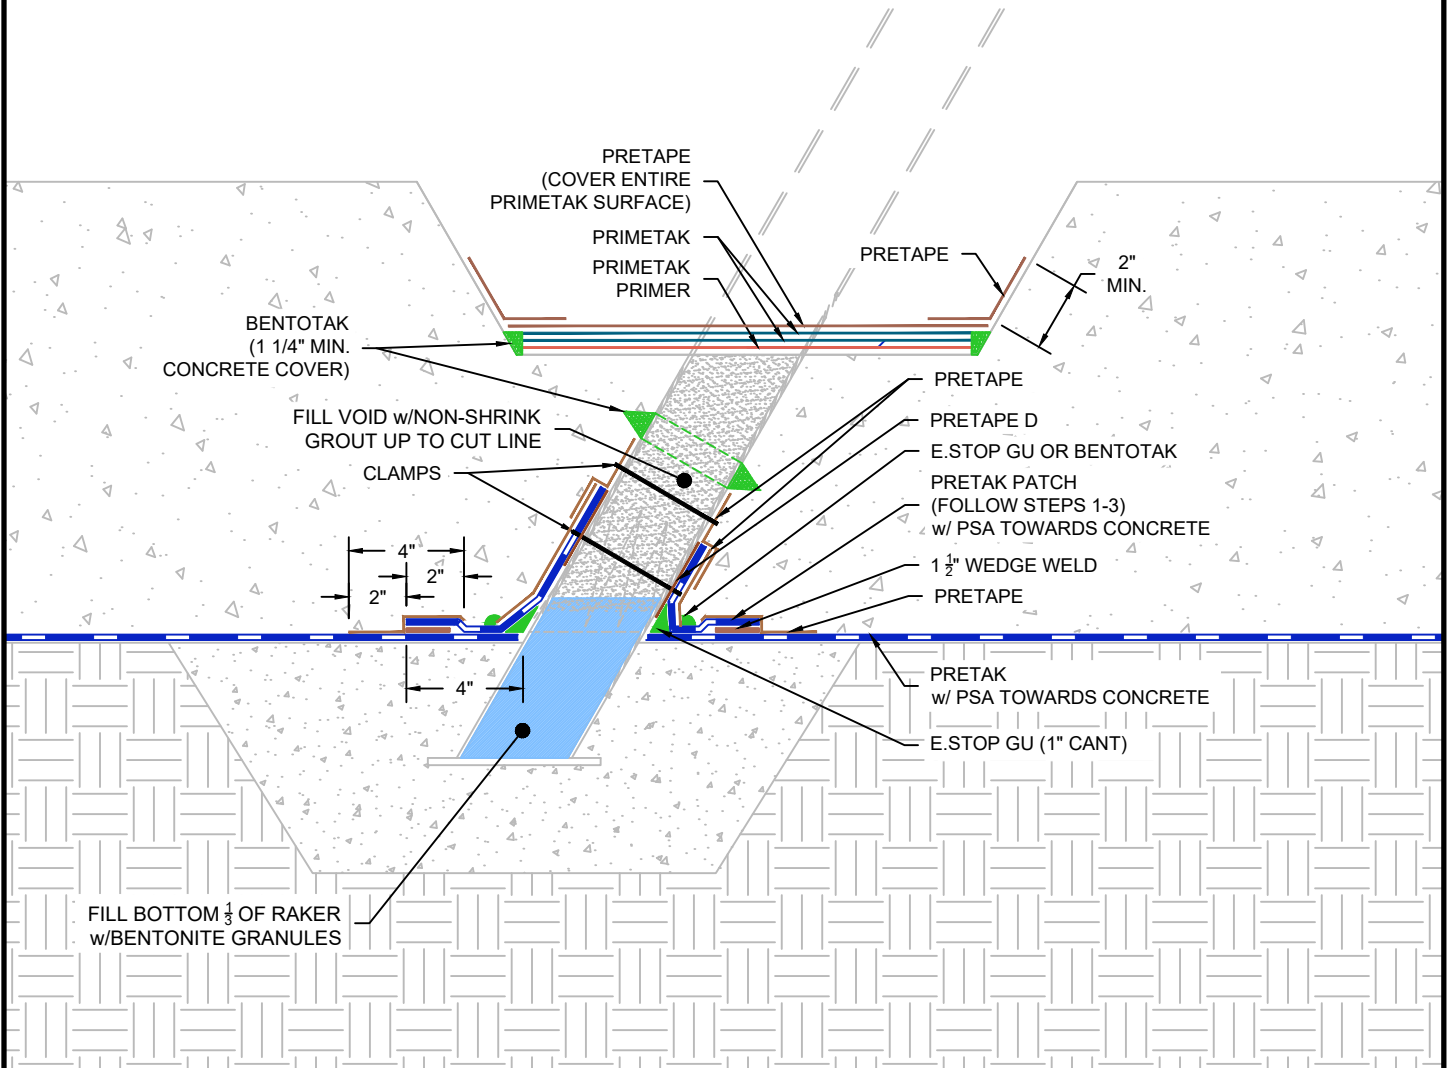

UNDERSLAB - PENETRATION - RAKER FOOTING - HYDROSTATIC



SYSTEM NAME

PRETAK HW

DRAFTER

RJT

DRAWING NUMBER

52.126.2.2

DATE

08/04/2026

PRETAK HW

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1