




STEP 1:
APPLY PRETAK TO ONE SIDE OF CORNER
WITH A MINIMUM OF 6" EXTENDING PAST
CORNER'S EDGE.
CUT FOLD AT BOTTOM OF SHEET AND TURN
VERTICAL SECTION AROUND CORNER AND
LEAVE HORIZONTAL LEG EXTENDED.

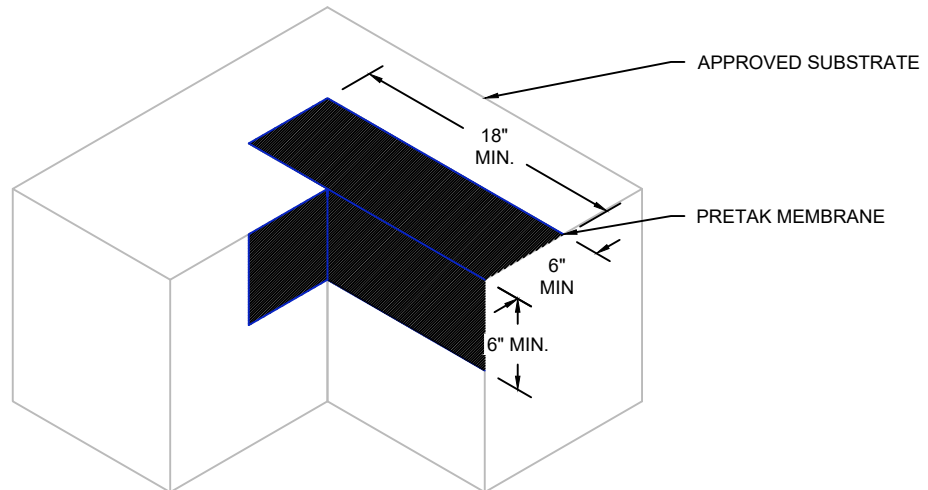

STEP 2:
APPLY SECOND PRETAK TO OPPOSITE
SIDE OF CORNER WITH A MINIMUM OF 6"
EXTENDING PAST CORNER'S EDGE.
CUT FOLD AT BOTTOM OF SHEET AND
TURN VERTICAL SECTION AROUND
CORNER TO OVERLAP FIRST SHEET AND
OVERLAP HORIZONTAL LEGS.

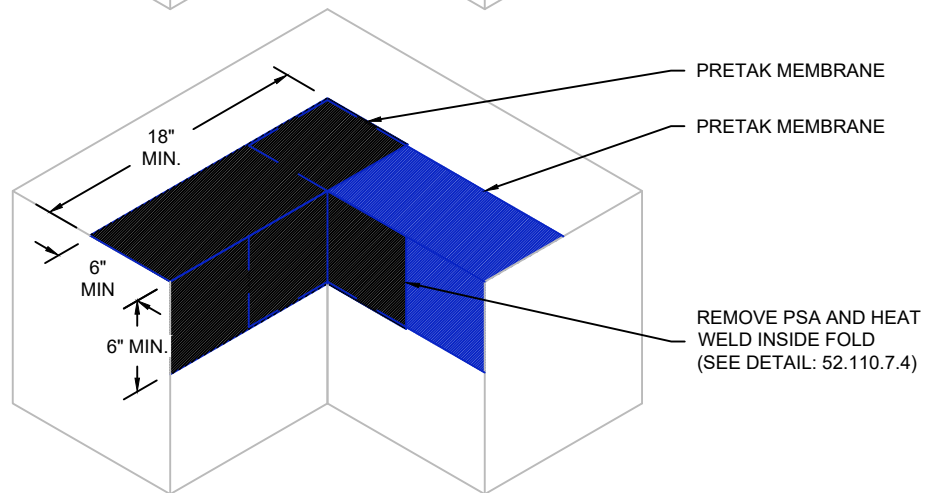

STEP 3:
APPLY PRETAPE AT THE SEAM BETWEEN
THE TWO SHEETS

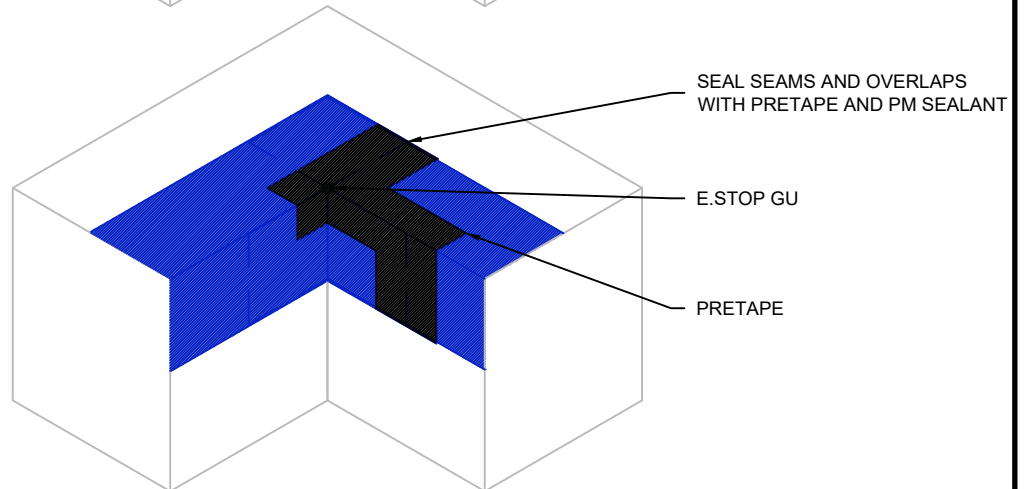

CORNER - TOPSIDE - INSIDE - FIELD FORMED



SYSTEM NAME
PRETAK HW
DRAFTER
RJT

DRAWING NUMBER
52.381.4
DATE
09/29/2026

PRETAK HW

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1