



STEP A:  
CUT A SQUARE  
PATCH OF PRETAK  
8" WIDER THAN  
THE WIDTH OF THE  
PENETRATION

PRETAK PATCH  
(FOLLOW STEPS A-C)

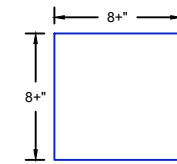




STEP B:  
FIND THE  
CENTER OF THE  
SQUARE BY  
FOLDING IT INTO  
QUARTERS

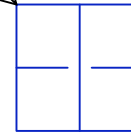

STEP C:  
STAR-CUT  
CENTER OF  
SQUARE TO THE  
WIDTH OF THE  
PENETRATION  
(TRIM FLANGES  
TO 2" MAX.  
LENGTH)

CUT & TRIM

STEP 3

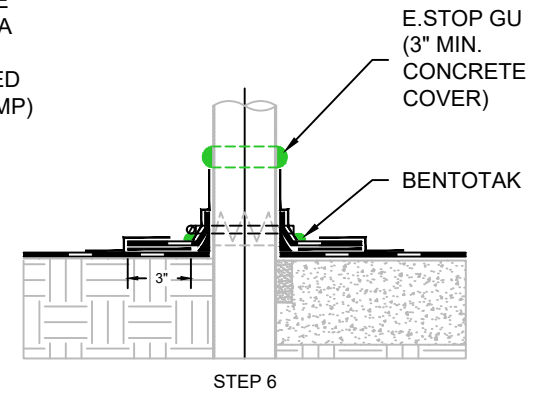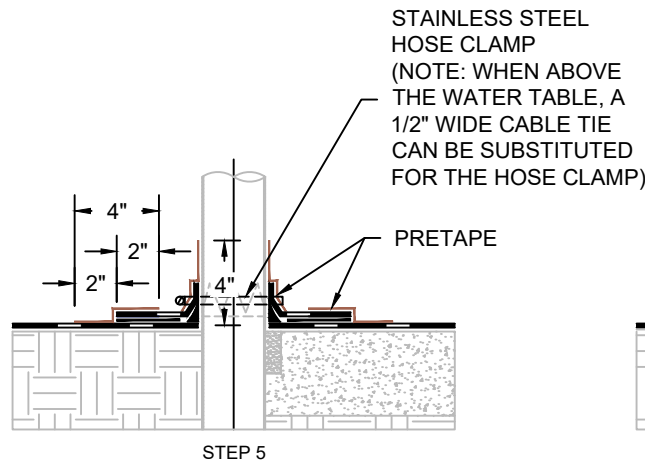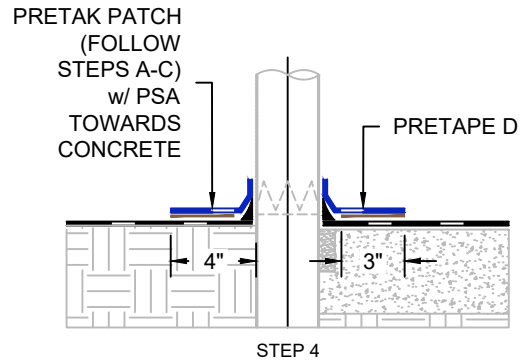

## UNDERSLAB PENETRATION - PIPE - SEQUENCE

SYSTEM NAME	DRAWING NUMBER	DATE	DRAWN BY
PRETAK	51.120.1-SEQ	10/18/2023	RJT

# PRETAK

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

SCALE  
NTS

PAGE 1 OF 1