



STEP 1

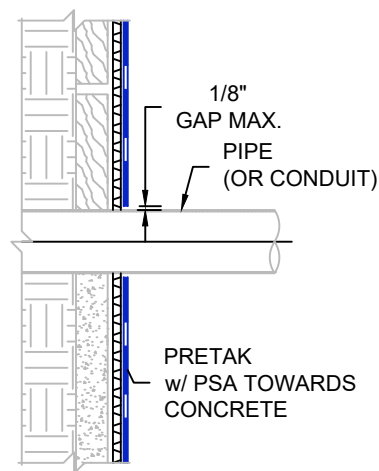


STEP 2

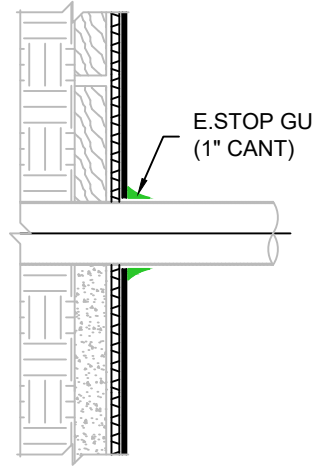


STEP 3

STEP A:
CUT A SQUARE
PATCH OF PRETAK
8" WIDER THAN
THE WIDTH OF THE
PENETRATION

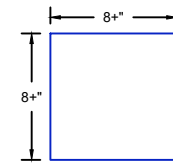


PRETAK PATCH
(FOLLOW STEPS A-C)

STEP B:
FIND THE
CENTER OF THE
SQUARE BY
FOLDING IT INTO
QUARTERS

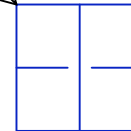


STEP C:
STAR-CUT
CENTER OF
SQUARE TO THE
WIDTH OF THE
PENETRATION
(TRIM FLANGES
TO 2" MAX.
LENGTH)

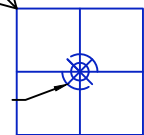


CUT & TRIM


STEP 4

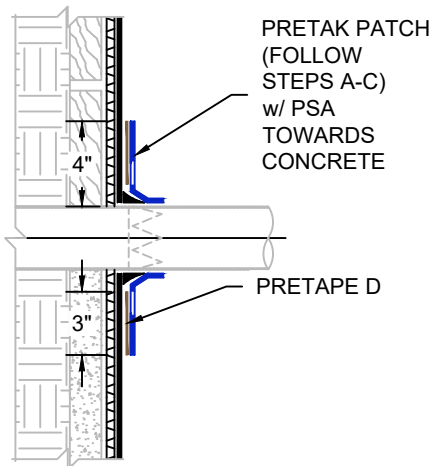

STEP 5

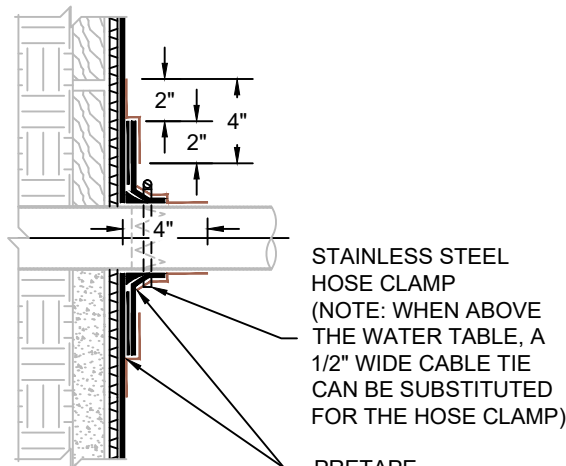

STEP 6

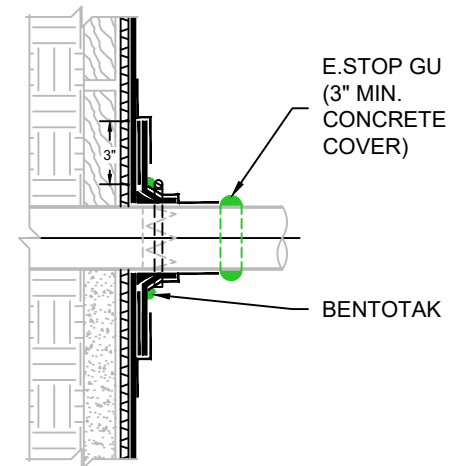

STEP 7



BLINDSIDE VERTICAL PENETRATION - PIPE - SEQUENCE

SYSTEM NAME	DRAWING NUMBER	DATE	DRAWN BY
PRETAK	51.320.1-SEQ	10/18/2023	RJT

PRETAK

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

SCALE
NTS

PAGE 1 OF 1