


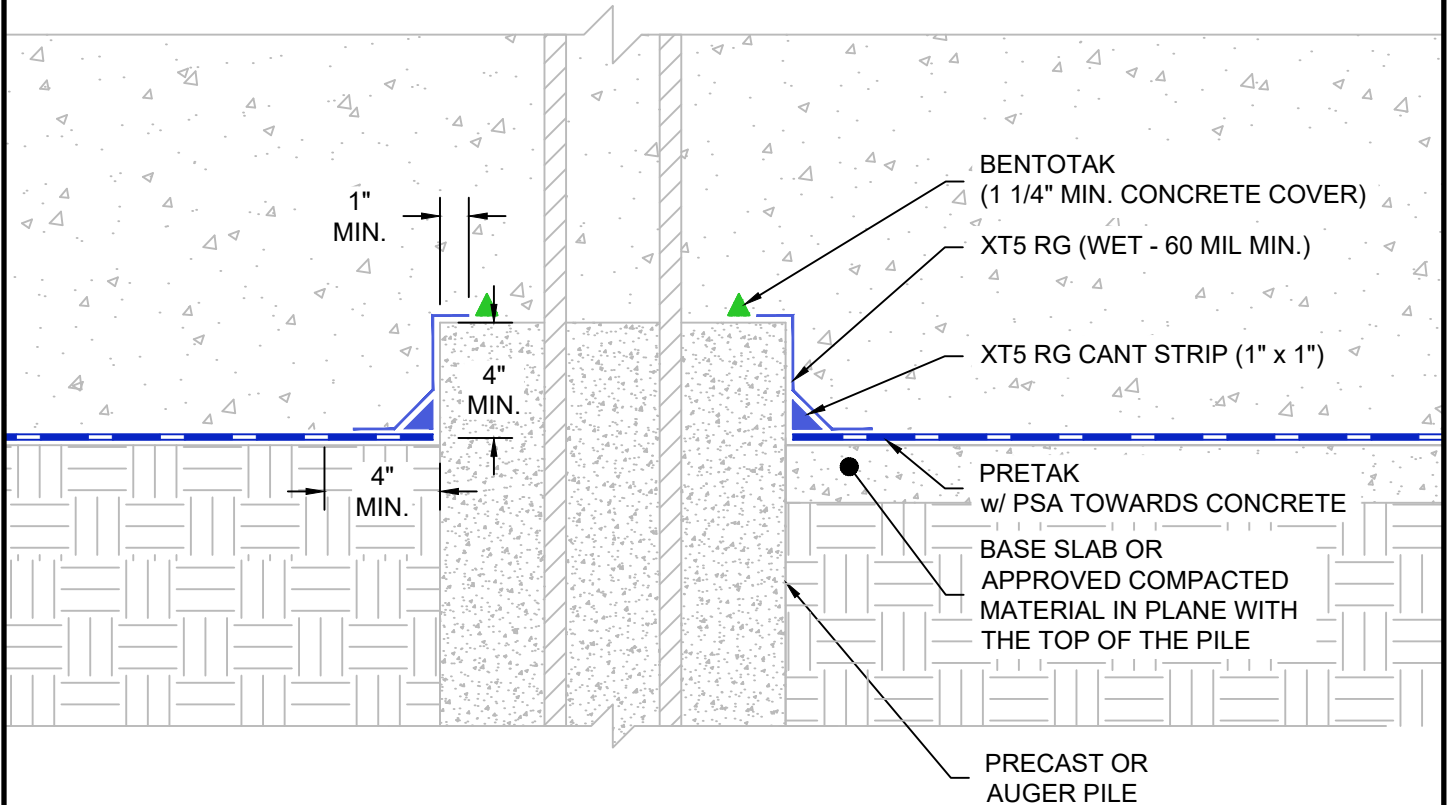

NOTE:

1. EXPOSED PORTION OF PILE MUST BE FREE OF VOID AND HAVE A MINIMUM WOOD FLOAT FINISH
2. ALLOW XT5 RG TO CURE A MINIMUM OF 1 HOUR AND A MAXIMUM OF 3 HOURS BEFORE APPLYING XT5 RG TACK COAT.
3. BROADCAST AGGREGATE INTO XT1 TACK COAT IMMEDIATELY AND LET CURE FOR A MINIMUM OF 12 HOURS.
4. SWEEP OR VACUUM OFF EXCESS AGGREGATE AND DISPOSE OF PROPERLY. DO NOT REUSE AGGREGATE.

UNDERSLAB PENETRATION - RAISED PILE CAP WITH FULL ENCAPSULATION - NON-HYDROSTATIC

	SYSTEM NAME	DRAWING NUMBER	
	PRETAK	51.121.1.4.4	
	DRAFTER	DATE	
	RJT	10/28/2025	

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1